

# RADIANTE 1000 STANDARD INSTALLATION

CHEMINEES PHILIPPE  
AUSTRALIA  
www.chemphilaust.com.au


## LEGEND

- Firebox Dimension
  - ▲ Exact Dimension
  - Minimum Dimension
  - ➡ Air Intake
  - ⇨ Air Outlet
- Brick Masonry

## NOTES:





- [1] Air intake grilles minimum air flow area required = 180cm<sup>2</sup> each side.
- [2] Air outlet grilles minimum air flow area = 240cm<sup>2</sup> each side and 480cm<sup>2</sup> if one grille is used.
- [3] Hearth height dimension optional (refer separate specs for construction.)
- [4] All dimensions in millimetres.
- [5] Heater can be left freestanding.
- [6] Do not scale from these diagrams
- [7] Ducting mandatory for exempt units to comply to AS/NZ 4012/4013:2014

## FIREPLACE CONSTRUCTION STEP 1

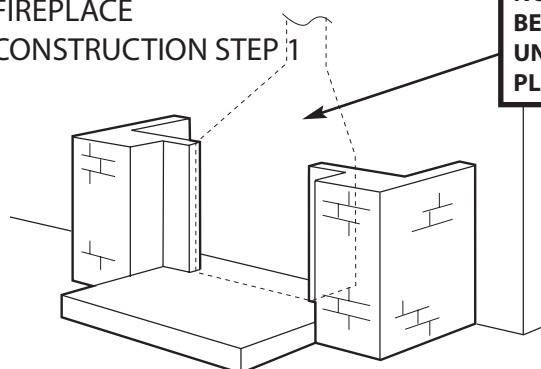

**IMPORTANT:  
NO BRICKWORK TO  
BE COMMENCED  
UNTIL FIREBOX IS  
PLACED IN POSITION**

## FIREPLACE CONSTRUCTION STEP 2

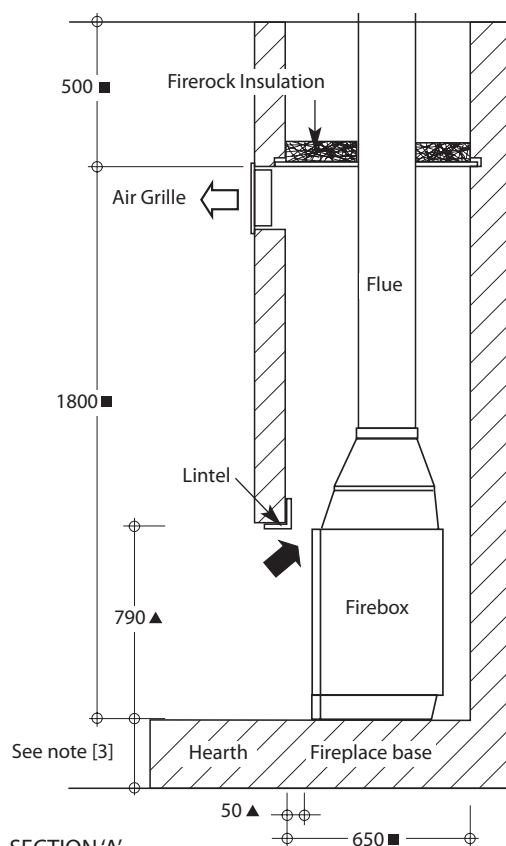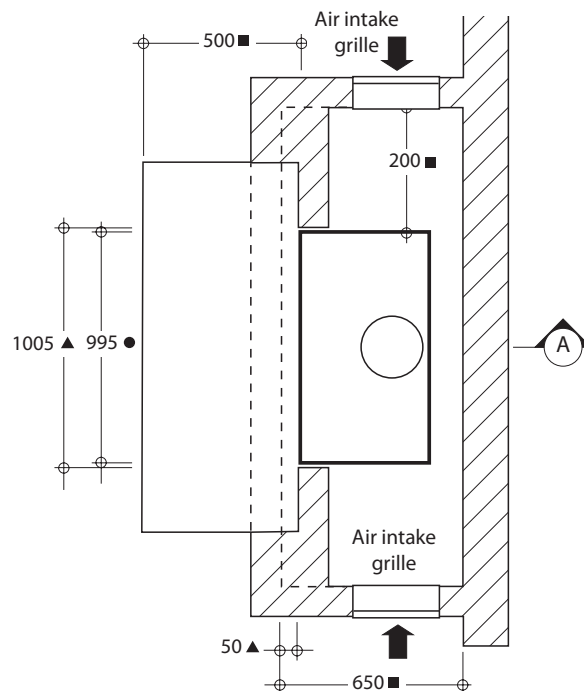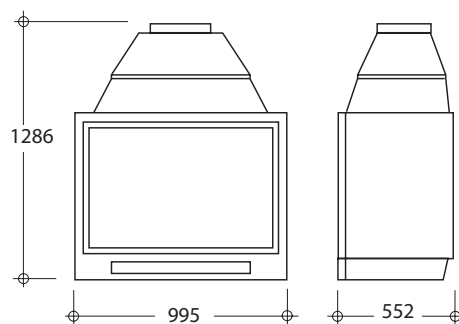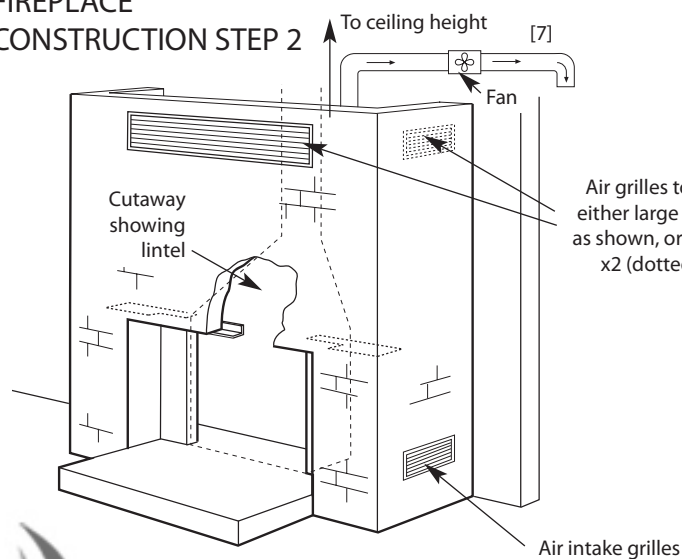

SECTION 'A'



**wignells**  
of melbourne since 1949

THE HOME OF QUALITY HEATING & COOKING SYSTEMS

430 Johnston St., Abbotsford, Victoria 3067 Phone: 03 9417 3315  
e-mail: sales@wignells.com.au www.wignells.com.au

*Wignells of Melbourne's policy is one of continuous development. We reserve the right to change sizes and specifications without notice.*